

Globetrotter

By using the Globetrotter in combination with BlueDV, you have a powerful digital voice communication tool that allows you to communicate from anywhere to anyone with just a simple internet connection.

The Globetrotter is basically an AMBE server and AMBE dongle in one. It can be switched between server and dongle in a few simple steps. With the server active you can connect your Android BlueDV AMBE app to the Globetrotter anywhere within range of the internet (WIFI). It is also possible to use the Globetrotter on the road while it is physically at your home.

In dongle mode, the Globetrotter is connected with a micro USB cable to the machine running BlueDV.

For the more experienced user, the Globetrotter can also be used as a remote AMBE server for Peanut etc.

The auto update mechanism checks for new firmware each time it is switched on. It is then installed by a single push of a button

Technical data :

- Support for DMR, D-Star and Fusion.
- 1" Bright Oled display.
- Solid ABS box.
- Instant boot (< 2 sec)
- Simple menu structured settings for WIFI configuration.
- Possibility to set the UDP port.
- Static or DHCP IP.
- Use a standard phone charger for the power supply.
- Baudrate 230400 in dongle mode.
- Auto update mechanism.
- Dimensions 90 X 62 X 30 mm.
- 5 Vdc micro USB-B.
- Micro USB-B to USB-A cable included.

